
# **Abarth 3 Ring Chrome Delete Kit**

# **INSTRUCTIONS**

# **Before Installation:**

1. Note that the 'notch' is the bottom.

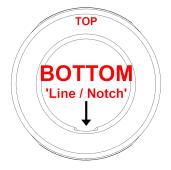



### Step 1.

Clean the area using a microfiber cloth to remove any dust or excess dirt.



## <u>Step 2.</u>

Remove the tape backing from the first cover and line it up to the button ring.

#### <u>Step 3.</u>

Once you're happy, place the cover over the ring and apply pressure for around 15 seconds to ensure it sticks.

#### Step 4.

Continue the previous steps to fit the remaining two rings.

#### Step 5.

Sit back and admire the new rings!



Thank you for your purchase with us!

